


THANK YOU!

Thank you for purchasing the EverServ 600. With technology specifically designed for your environment, your success is our passion.

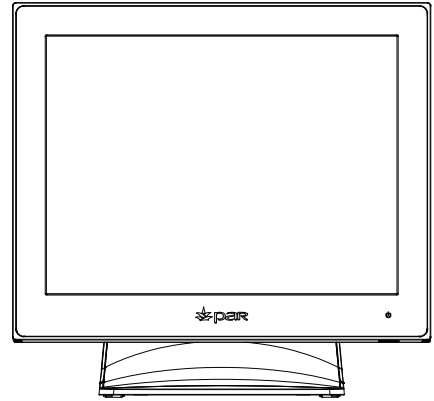

FOR PRODUCT INFORMATION AND FULL USER GUIDE VISIT: <https://support.partech.com/>

1 EXAMINE THE SHIPMENT




Please ensure all equipment is present.

Report any missing or damaged equipment to your PAR Salesperson or PAR Channel Partner.




2 INVENTORY COMPONENTS


Ensure you have the items listed below in your order.

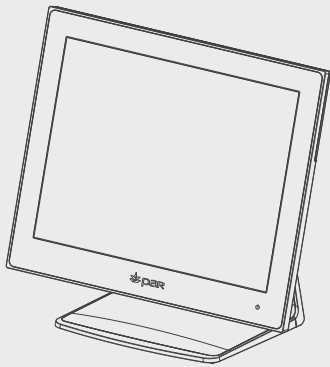

EverServ 600

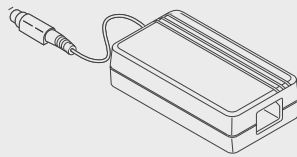

Power Supply

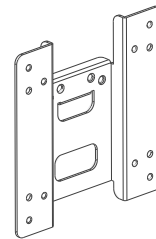


VESA Adapter Plate
(M6150-10, M6150-11 & M6155-10 Models Only)



Power Cord
(Packaged Separately)

REMOVING TERMINAL FROM BOX

Remove the terminal from the box by grasping the sides of the end caps and lifting up.

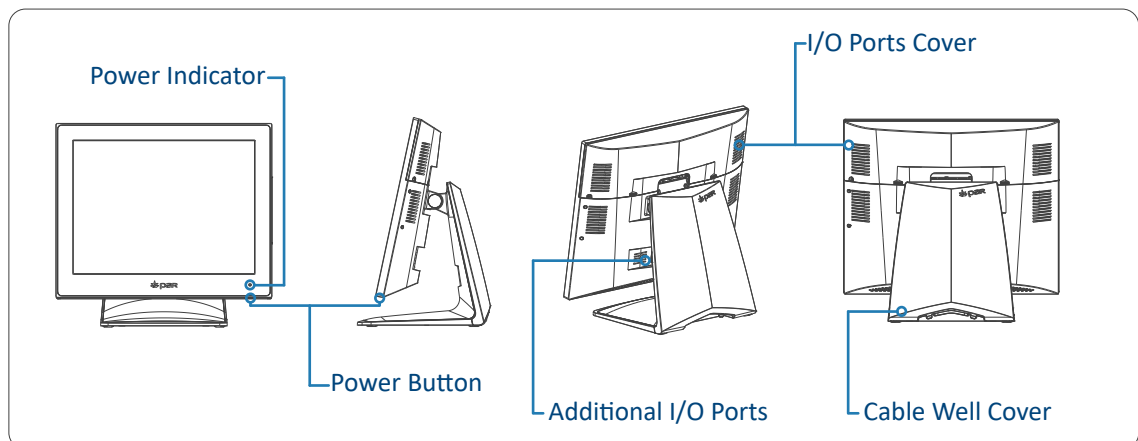

ACCESSING THE I/O WELL & CONNECTING CABLES


1 Remove the stand cover by holding the terminal with one hand and pulling the bottom of the stand cover by the cover hooks.

2 Remove the I/O cover by pressing the two tabs and pulling the cover straight up away from the terminal.

3 Connect your cables in the designated I/O ports and then route through the terminal stand.



4 Remove the sticker from the I/O cover, then replace the cover on the terminal. Replace the stand cover by first connecting the top tabs then pressing on the bottom.

MAIN I/O BOARD

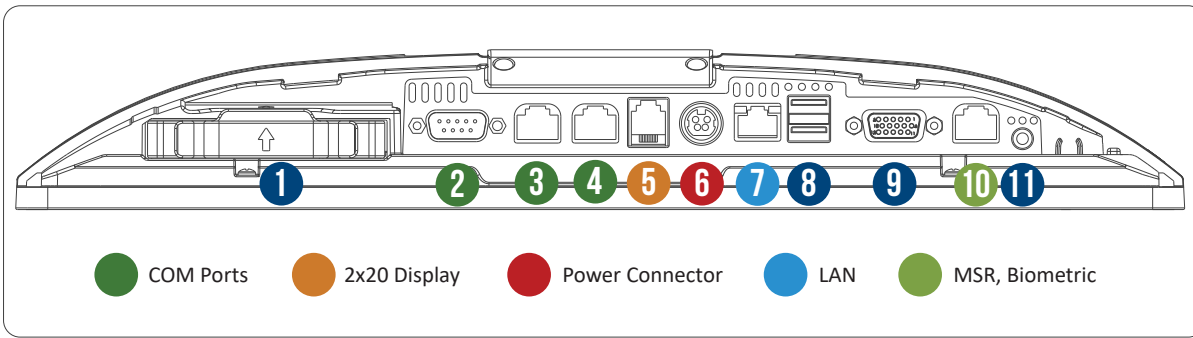

1 SSD	7 LAN
2 COM1 (DB9)	8 USB 2.0
3 COM 2 (RJ45)	9 VGA
4 COM 3 (RJ45)	10 MSR
5 2x20 Display Only	11 Audio
6 Power Input	

ADDITIONAL I/O

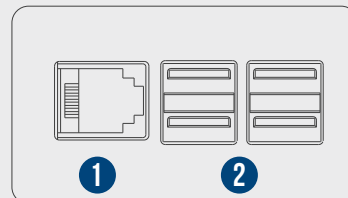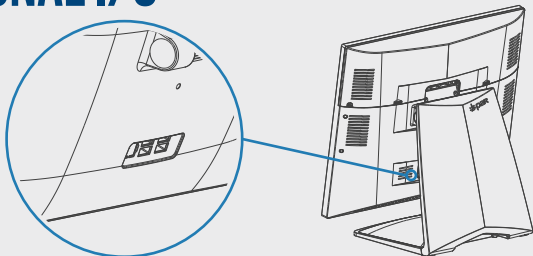

1 Cash Drawer
2 USB 2.0