




ParTech, Inc.
8383 Seneca Turnpike
New Hartford, NY 13413

PARTM

Tablet 8

Quick Start

 Guide

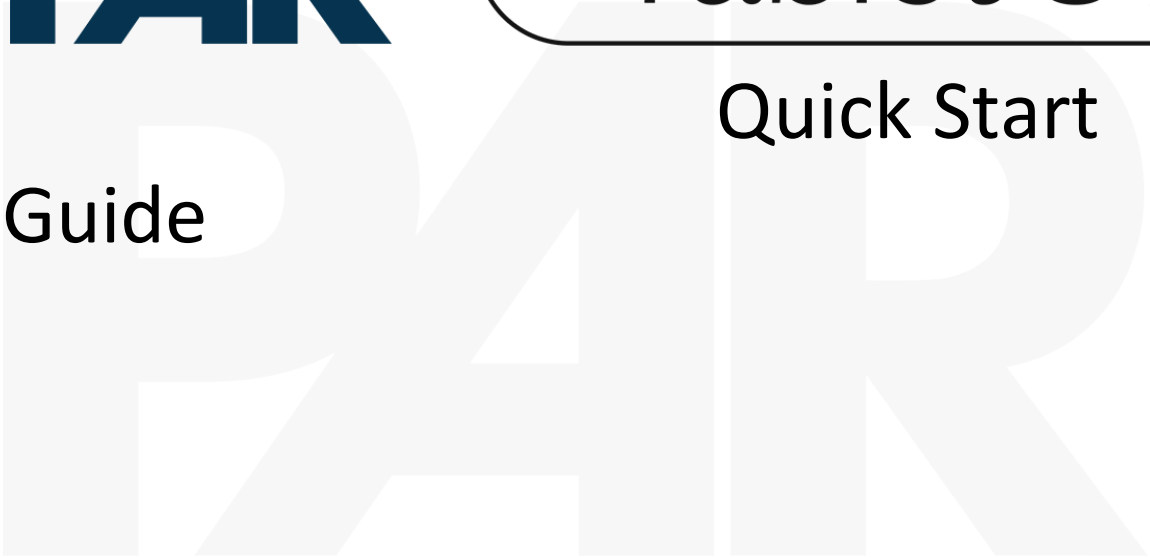



ParTech, Inc.
8383 Seneca Turnpike
New Hartford, NY 13413

PARTM



ParTech, Inc.
8383 Seneca Turnpike
New Hartford, NY 13413



This material has been created in order to accommodate a wide range of operations and your specific business practices and system configuration may differ slightly from what is represented in this material. While ParTech, Inc. ("PAR") takes great care to ensure the accuracy of these materials, all material is provided "as is" without warranty of any kind, either express or implied, including, but not limited to, warranties of merchantability or fitness for a particular purpose. PAR does not make any warranties or representations that the materials will meet your requirements or that the operations of the hardware will be uninterrupted or error free.

Trademark Notices: The PAR logo is a trademark of PAR Technology Corporation, the parent company of ParTech, Inc. All other product names used throughout this material are trademarks of the respective companies. No such use of any trademark is intended to convey endorsement or other affiliation with these companies.



Table of Contents

- Getting to Know Your PAR Tablet 8.....5
- Front View5
- Top View6
- Bottom View6
- Right View7
- Rear View8
- Tablet Charging9
- How to Charge Your Tablet 10
- Hard Reset 10
- Docking Station 11
- Battery Removal Instructions..... 12
- Important Product and Safety information 13
- Battery Safety: 13
- Storage of Batteries: 14
- Recycling..... 14
- Warning Statements 15
- PAR Phone Numbers 15





ParTech, Inc.
8383 Seneca Turnpike
New Hartford, NY 13413

Getting to Know Your PAR Tablet 8

IMPORTANT: Review this user guide in its entirety including all warning statements prior to use.

Front View

 


Feature
1 Indicator LED When camera is in use.
2 Front camera
3 Front microphone
4 Ambient Light Sensor



ParTech, Inc.
8383 Seneca Turnpike
New Hartford, NY 13413

Top View

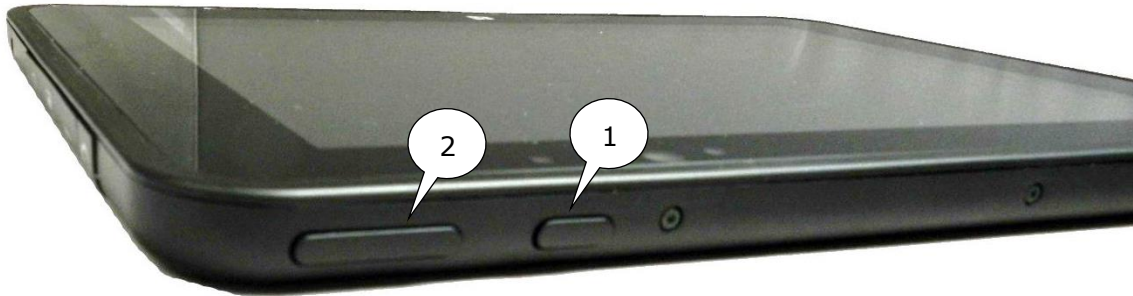

Feature
1 Power On/Off button
2 Volume button

Bottom View



Feature
1 Docking connector



ParTech, Inc.
8383 Seneca Turnpike
New Hartford, NY 13413

Right View



Feature
1 Audio jack
2 USB 2.0 port
3 MicroUSB Interface connector
4 MicroSDXC card slot
5 Stereo speakers



ParTech, Inc.
8383 Seneca Turnpike
New Hartford, NY 13413

Rear View



Feature
1 Rear camera
2 Camera flash LED
3 Rear microphones
4 NFC antenna position
5 Battery cover
6 Mechanical fix points (lower right called out)
Four (4) points located behind the corner covers.

 


ParTech, Inc.
8383 Seneca Turnpike
New Hartford, NY 13413

Tablet Charging

The following provides information on charging your tablet.

⚠️ WARNING: IMPROPER CHARGING MAY RESULT IN DAMAGE TO THE TABLET, FIRE OR SERIOUS PERSONAL INJURY. ONLY USE THE CHARGER THAT WAS DELIVERED WITH THE TABLET.

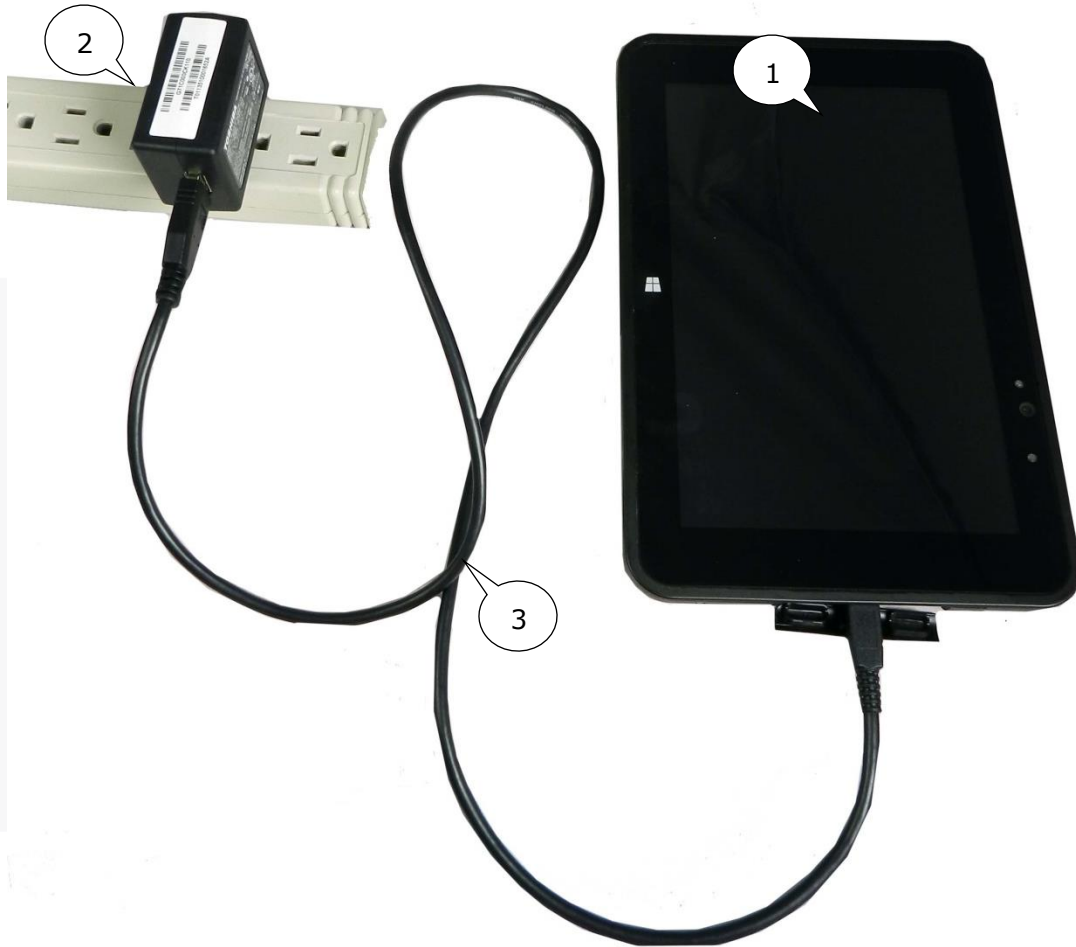

Feature
1 Tablet
2 Power plug
3 USB/Power cable



ParTech, Inc.
8383 Seneca Turnpike
New Hartford, NY 13413

NOTE: Only use the provided wall charger for charging the PAR tablet. Do not use any other charging devices or USB ports to charge the device. **DO NOT** use damaged chargers or power cables. **DO NOT** use the charger where moisture is present as electrical shock, fire, personal injury or damage to the tablet or other property may result.

How to Charge Your Tablet

If this is the first time using your tablet, make sure battery is fully charged before disconnecting the unit.

1. Connect the USB side of the USB/power cable to the power plug.
2. Connect the MicroUSB side of the USB/power cable to the MicroUSB Interface connector.
3. Insert the power plug into an electrical outlet.
4. You can press the power button to start the unit.
5. Follow the instructions on the screen to complete the setup.

Hard Reset

Just in case your tablet freezes, you may need to do a hard reset.

1. Press and hold the power button for approximately 14 seconds. The tablet will turn off.



2. Wait 30 seconds and then press the power button to turn the tablet on.



ParTech, Inc.
8383 Seneca Turnpike
New Hartford, NY 13413

Docking Station

The following provides information on the optional docking stations. The difference between the stations is the "connection panel." Only the station with the panel is shown below.

! WARNING: USE OF INCOMPATIBLE DOCKING STATIONS MAY RESULT IN DAMAGE TO THE TABLET, FIRE OR SERIOUS PERSONAL INJURY. USE ONLY WITH THE DOCKING STATIONS AUTHORIZED FOR USE BY THE TABLET SUPPLIER.



Features
1 Tablet connector
2 Release button
3 Power plug/connector
4 Power supply
5 Power cable
6 Power cable connector
7 Connection panel



Battery Removal Instructions

1. Remove the battery door by lifting the small access area on the back cover, which is shown circled below. **DO NOT use any tools or sharp instruments as damage to the battery will result.**



2. To remove the battery, pull the red tab.



- ⚠ DO NOT use any tools or sharp instruments to remove the battery door, as this will cause damage to the battery and/or cause serious personal injury.**



Important Product and Safety information

Battery Safety:

- **IMPROPER HANDLING OF BATTERY MAY RESULT IN EXPLOSION, FIRE, PROPERTY DAMAGE, SERIOUS PERSONAL INJURY OR DEATH.**
 - **DO NOT DISASSEMBLE BATTERY.**
 - **DO NOT HIT, BEND, CRUSH, PUNCTURE, DROP, STRIKE WITH ANY OBJECT, ATTEMPT TO MODIFY OR OTHERWISE MISUSE BATTERY.**
 - **EXPOSURE TO HEAT MAY CAUSE BATTERY TO EXPLODE. DO NOT PLACE BATTERY IN FIRE OR LIQUID OR IN CLOSE PROXIMITY TO A HEAT SOURCE. BATTERY TEMPERATURE NOT TO EXCEED 60°C/140°F.**
 - **IMPROPER CHARGING MAY CAUSE BATTERY TO EXPLODE. USE ONLY THE CHARGER SUPPLIED WITH THE TABLET AND USE ONLY COMPATIBLE DOCKING STATIONS.**
 - **USE ONLY AUTHORIZED REPLACEMENT BATTERIES.**
- Stop using the tablet if abnormal heat, odor, discoloration, deformation or abnormal condition is detected during use, charge or storage.
- If the battery is leaking electrolytes, avoid contact with the skin, as it will cause skin irritation. If contact with skin occurs, wash thoroughly with clear water.
- External short circuit to the battery may result in electrical shock or overheating which may cause fire or explosion.
- Do not drop, bend, or twist your tablet. This can break tablet display glass, internal circuit boards or mechanics. If the glass breaks, do not touch the glass parts of the device or attempt to remove the broken glass from the device. Stop using the device until the glass is replaced by qualified service personnel.
- If your tablet is malfunctioning or in need of service, call the numbers listed on page 13.
- Do not try to disassemble the tablet. This may damage the device.
- Operate your device in a place where temperature is between -10°C/14°F and +50°C/122°F
- Store your device in a place where temperature is between -20°C/-4°F and +60°C/140°F
- Ensure the battery door is securely seated. Improper battery door placement and connector cover placement will allow liquid or moisture penetration into the device, causing damage. If your tablet comes in contact with liquid, call the numbers listed on page 13.



ParTech, Inc.
8383 Seneca Turnpike
New Hartford, NY 13413

- Listen to a headset at a moderate level, and do not place the device loudspeaker outlets near your ear when the loudspeakers are in use.
- Use only soft, clean and dry lint-free cloth to clean your device.
- Keep the unit and accessories away from small children.
- Switch off your device before boarding an aircraft.
- Switch off your device in any area with a potentially explosive atmosphere.
- This product meets necessary regulatory guidelines for exposure to radio waves (SAR, Specific Absorption Rate).
- Use only charger which was delivered with your tablet.
- Do not disconnect charger by pulling the cord.
- Do not use damaged power cords or plugs.
- Save energy:
 - Close unused applications and data connections.
 - Decrease screen brightness and sound volume.
 - Deactivate unnecessary sounds like touch panel sound.
 - Disconnect your charger from AC outlet when charger is not needed.
 - Do not keep unnecessary accessories connected in your device.

Storage of Batteries:

If the battery needs to be removed from the tablet, it must be placed in a cool, dry location. It must also be protected from anything that may puncture or pierce it. Keep batteries away from children.

Do not store the batteries for longer than six months, because the battery life will be degraded.

Recycling

Return the used electronic units to dedicated collection points for proper recycling. The tablet has an internal lithium ion polymer battery, which must be recycled or disposed in accordance with applicable environmental laws.

Call PAR if there are any questions concerning recycling. See phone numbers on the last page.



ParTech, Inc.
8383 Seneca Turnpike
New Hartford, NY 13413

Warning Statements

- **WLAN 802.11 a/n bands are allowed for indoor use only.**
- **IMPROPER HANDLING OF BATTERY MAY RESULT IN EXPLOSION, FIRE, PROPERTY DAMAGE, SERIOUS PERSONAL INJURY OR DEATH. SEE IMPORTANT PRODUCT SAFETY INFORMATION ABOVE.**
- **To prevent possible hearing damage, do not listen to headphones at high volume for long periods of time. Turn the volume to the lowest level while using earbuds or a headset.**

PAR Phone Numbers

For Service

USA:	800.382.6200
Canada:	800.387.4963

For Parts

USA:	800.PAR.PART
Canada:	800.387.4963

For Sales

Continental USA:	800.448.6505
Outside Continental USA:	315.738.0600